


## Yaesu G-800SA & G-1000SA

You must wire as follows:

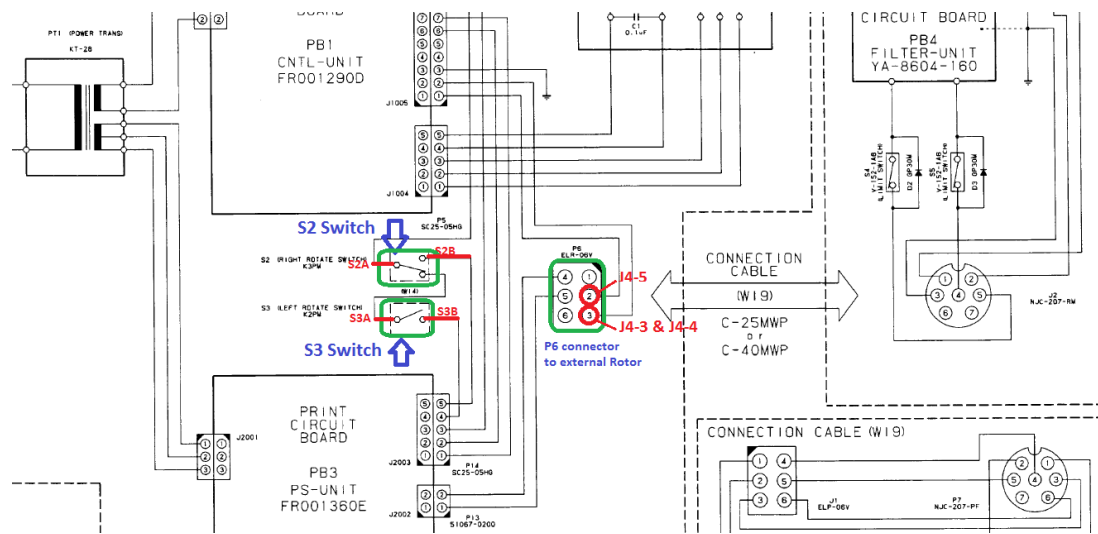

### J1 - Relay Connector

J1-1: Free	J1-7: Free
J1-2: to S2A	J1-8: to S3A
J1-3: to S2B	J1-9: to S3B

### J4 - Azimuth A/D input

J4-3 & J4-4: to the point **3** @ **P6 connector**  
J4-5: to the point **2** @ **P6 connector**