

Information for Customers Operating Transceivers in the UK

Thank you very much for purchasing this YAESU HF transceiver.


The Transceivers listed in this notice are configured at the factory with the WRC-15 5 MHz (60 m) allocation as shown below as "B2".

When your Transceiver is operated in the UK or a location where the 5 MHz allocation is the same as the UK shown below as configuration "C2", then you need to follow the instructions below for your model to change the 5 MHz (60 m) configuration, before using the transceiver for the first time.

5 MHz (60 m) band frequency range configuration "B2" Factory Default Setting	5 MHz (60 m) band frequency range configuration "C2" Selectable Setting
5.351500 MHz - 5.366500 MHz	5.250000 MHz - 5.406500 MHz

FTDX101MP / FTDX101D

1. Turn the transceiver OFF.
2. Press and hold in the [FUNC] and [MODE] buttons while turning the transceiver ON.
The green LED Indicator will blink with intervals of 0.5 sec (0.5 sec ON, 0.5 sec OFF).
3. Press and release the [MODE] button, and the Green LED Indicator will now blink with interval of 1 sec (1 sec ON, 1 sec OFF).
4. Press and hold in the [MODE] button, and the radio will re-start automatically. Once restarted the change of 5 MHz frequency configuration will have been completed successfully.

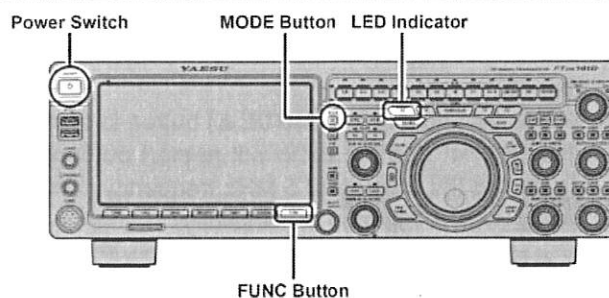

ATTIVA SOLO 1 70 MHz

FTDX5000 / FTDX3000 / FTDX1200

1. Turn the transceiver OFF.
2. Press and hold in the [MENU] and [C.S] buttons while turning the transceiver ON.
The green LED Indicator will blink with intervals of 0.5 sec (0.5 sec ON, 0.5 sec OFF).
3. Press and release the [MENU] button, and the Green LED Indicator will now blink with interval of 1 sec (1 sec ON, 1 sec OFF).
4. Press and hold in the [MENU] button, and the radio will re-start automatically. Once restarted the change of 5 MHz frequency configuration will have been completed successfully.

